


BLUETECHNIX
Embedding Ideas

Argos3D-P220

Hardware User Manual

Version 5

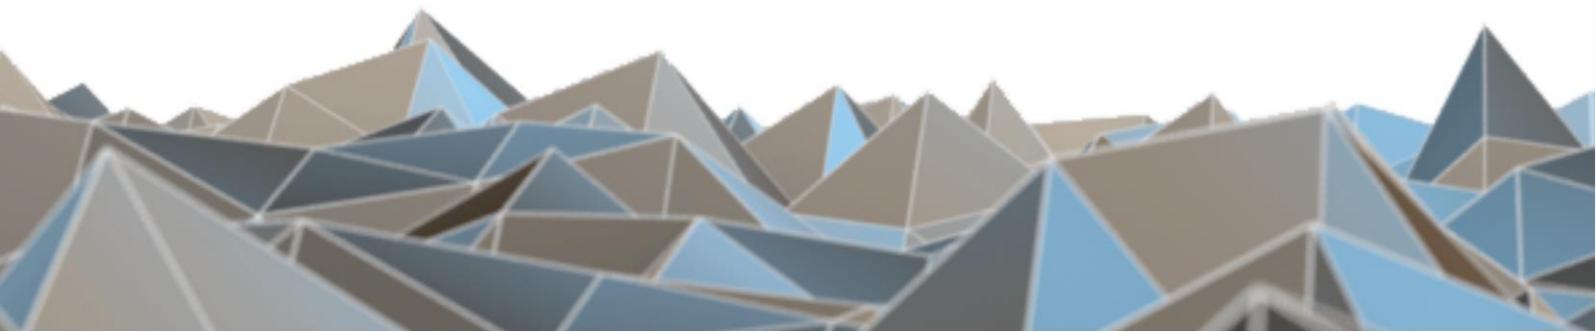



BECOM BLUETECHNIX GmbH

Gutheil-Schoder-Gasse 17
A-1230 Vienna
AUSTRIA

office@bluetechnix.com
www.bluetechnix.com

Argos3D-P220 – Hardware User Manual

Subject to change without notice. Errors excepted.

This document is protected by copyright. All rights reserved. No part of this document may be reproduced or transmitted for any purpose in any form or by any means, electronically or mechanically, without expressly written permission by Bluetechnix GmbH.



Table of Contents

1	General Information.....	6
1.1	Symbols Used.....	6
1.2	Certification.....	6
1.2.1	CE Declaration.....	6
1.2.2	Eye Safety.....	7
1.3	Safety instructions.....	7
1.4	Electrical connection.....	7
2	Argos3D-P220 Components.....	8
3	Mechanical Description.....	9
3.1	Dimensions.....	9
3.1.1	In-wall mounting with cover panel.....	9
3.1.2	Top view.....	9
3.1.3	Front view.....	10
3.1.4	Back view.....	10
3.1.5	Side view.....	11
3.1.6	Mount Spacing.....	11
4	Interface Description.....	12
4.1	Signal naming.....	12
4.2	Connector Numbering.....	12
4.2.1	Connector description.....	12
4.2.2	Power supply.....	13
4.2.3	DIO.....	13
4.2.4	Trigger In.....	13
4.2.5	RS485 Mounting Option.....	13
4.3	Mating Parts.....	14
4.3.1	Interconnection cable.....	14
4.3.2	Development Adapter.....	14
4.3.3	Interconnection Adapter.....	14
5	Software.....	15
5.1	Firmware.....	15
5.2	Demo Application.....	15
5.3	Getting Started Software Development Example.....	15
6	Appendix.....	16
6.1	Operating Conditions.....	16
6.1.1	Input current.....	16
6.1.2	Temperature at the case.....	17



6.2	Optical Characteristics.....	17
6.3	Performance.....	18
6.3.1	Environmental Conditions.....	18
6.3.2	Precision	18
6.3.3	Accuracy	19
6.4	Sensor Location	19
7	Support.....	20
7.1.1	General Support.....	20
7.2	Related Products	20
8	Product History	21
8.1	Version Information	21
8.1.1	Argos3D-P220	21
8.2	Anomalies.....	21
8.3	Document Revision History	21



© BECOM BLUETECHNIX GmbH 2018

All Rights Reserved.

The information herein is given to describe certain components and shall not be considered as a guarantee of characteristics.

Terms of delivery and rights of technical change reserved.

We hereby disclaim any warranties, including but not limited to warranties of non-infringement, regarding circuits, descriptions and charts stated herein.

BECOM BLUETECHNIX makes and you receive no warranties or conditions, express, implied, statutory or in any communication with you. Bluetechnix specifically disclaims any implied warranty of merchantability or fitness for a particular purpose.

BECOM BLUETECHNIX takes no liability for any damages and errors causing of the usage of this board. The user of this board is responsible by himself for the functionality of his application. He is allowed to use the board only if he has the qualification. More information is found in the General Terms and Conditions (AGB).

Information

For further information on technology, delivery terms and conditions and prices please contact BECOM BLUETECHNIX (<http://www.bluetechnix.com>).

Warning

Due to technical requirements components may contain dangerous substances.

1 General Information

This guide applies to the Argos3D-P220 camera platform from BECOM BLUETECHNIX GmbH. Follow this guide chapter by chapter to set up and understand your product. If a section of this document only applies to certain camera parts, this is indicated at the beginning of the respective section.

The document applies to product V1.5.

1.1 Symbols Used

This guide makes use of a few symbols and conventions:



Warning

Indicates a situation which, if not avoided, could result in minor or moderate injury and/or property damage or damage to the device.



Caution

Indicates a situation which, if not avoided, may result in minor damage to the device, in malfunction of the device or in data loss.



Note

Notes provide information on special issues related to the device or provide information that will make operation of the device easier.

Procedures

A procedure always starts with a headline

1. The number indicates the step number of a certain procedure you are expected to follow. Steps are numbered sequentially.

This sign ► indicates an expected result of your action.

References

 This symbol indicates a cross reference to a different chapter of this manual or to an external document.

1.2 Certification

1.2.1 CE Declaration

BECOM BLUETECHNIX hereby declares that this Argos3D-P220 product is in compliance with the essential requirements and other relevant provisions of Directive 2014/35/EU.





1.2.2 Eye Safety

Illumination: LEDs	Wavelength	850nm (typ)	In accordance with EN62471:2008 resp. IEC62471:2006
	Output power	TBD	

1.3 Safety instructions



Important

This manual is part of the device and contains information and illustrations about the correct handling of the device and must be read before installation or use. Observe the operating instructions. Non-observance of the instructions, operation which is not in accordance with use as prescribed below, wrong installation or handling can affect the safety of people and machinery.

The installation and connection must comply with the applicable national and international standards. Responsibility lies with the person installing the unit.

1.4 Electrical connection



Note

The unit must be connected by a qualified electrician.

Device of protection class III (PC III).

The electric supply must only be made via PELV circuits.

The device must only be powered by a limited energy source ($\leq 30V$; $\leq 8A$; $\leq 100VA$).

Disconnect power before connecting the unit.



2 Argos3D-P220 Components

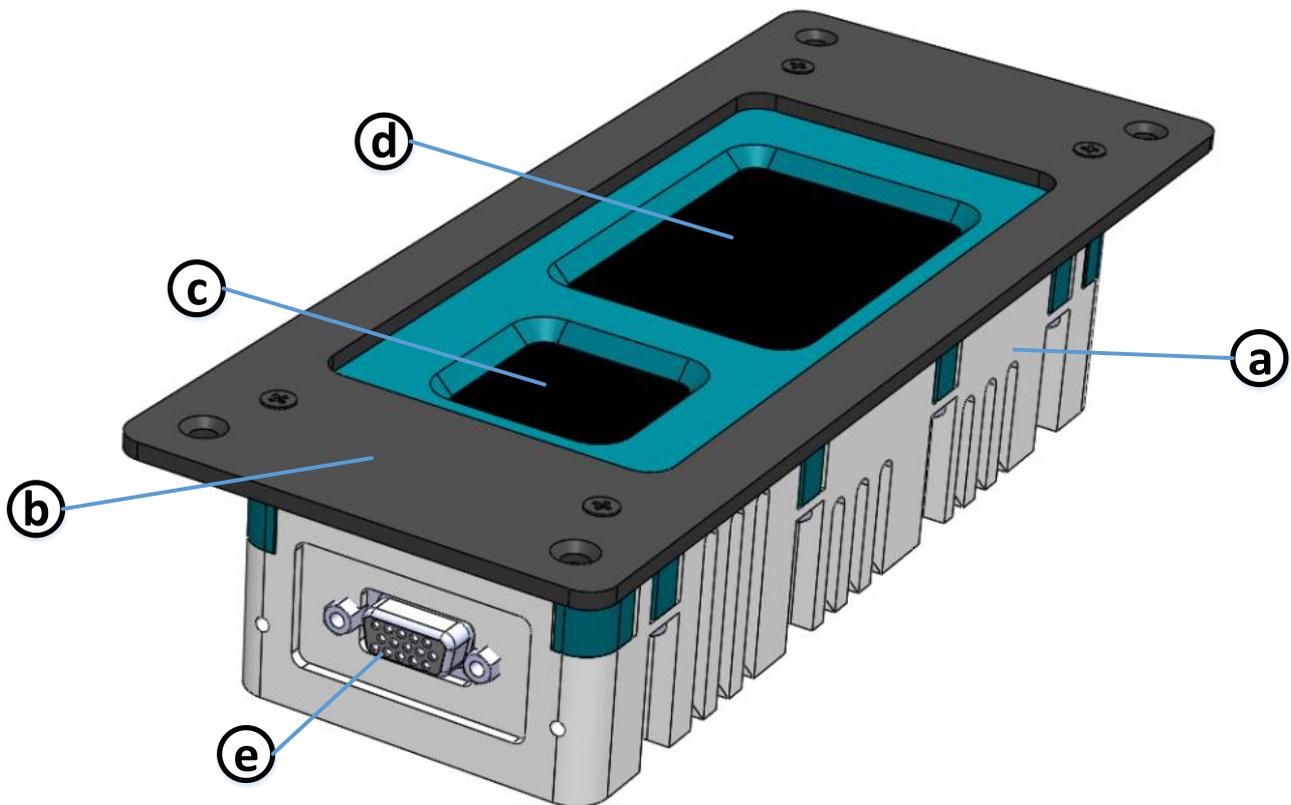


Figure 2-1 Argos3D-P220 components

- a. Case
- b. Cover plate (can be removed by unscrewing)
- c. Viewing window for 3D sensor
- d. Viewing window for illumination module
- e. IP67 compliant connector



3 Mechanical Description

3.1 Dimensions

All dimensions are in mm, tolerance +/-0,2mm.

3.1.1 In-wall mounting with cover panel

Please use M4 screws for in-wall mounting using the cover panel.

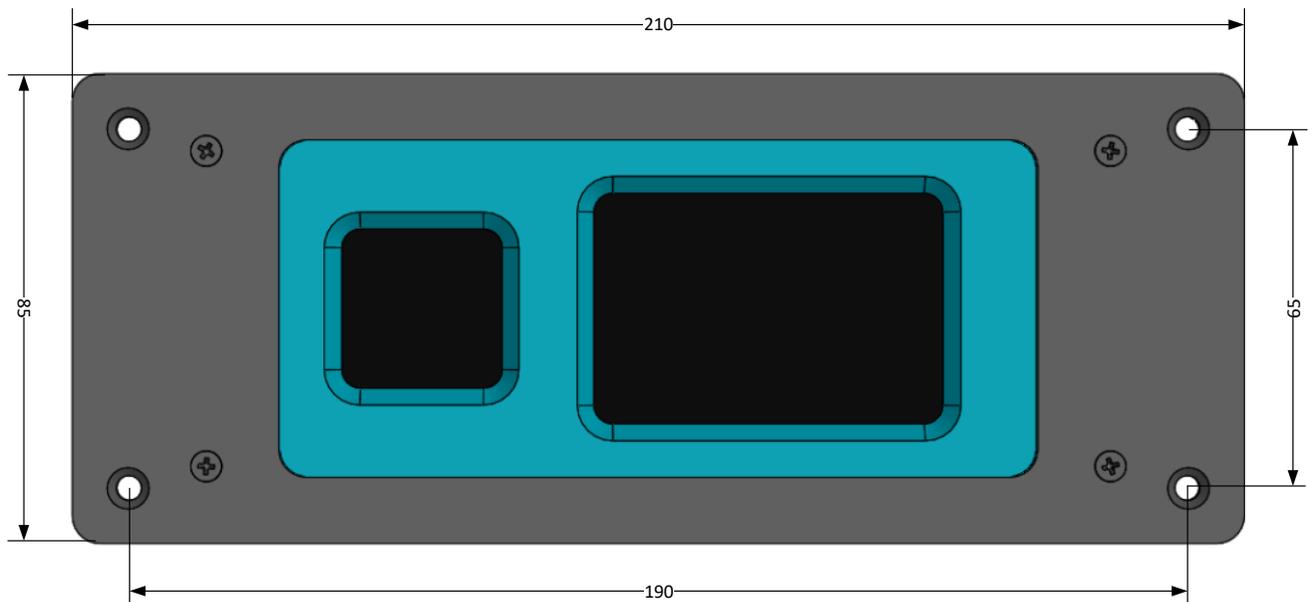


Figure 3-1: Dimensions for in-wall mounting with cover panel

3.1.2 Top view

Top mounting hole size: M3

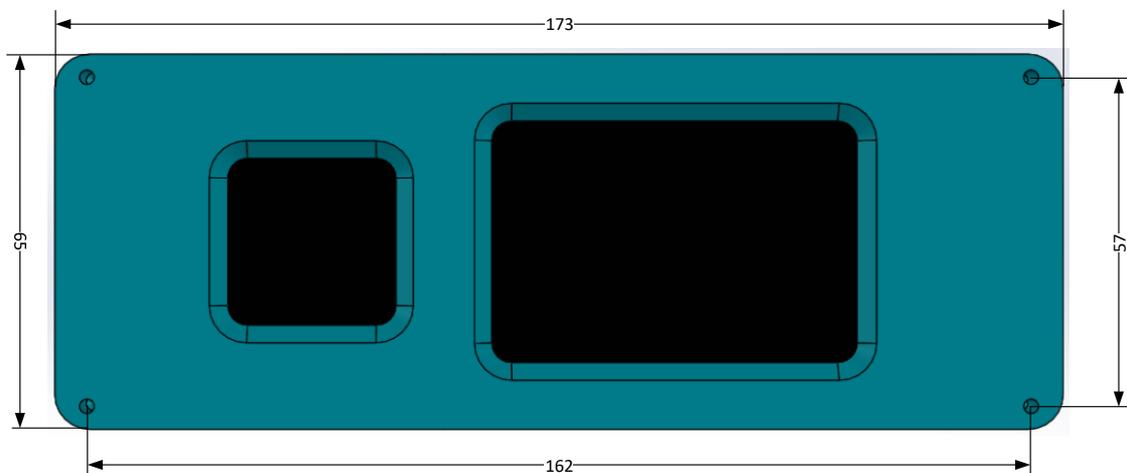


Figure 3-2: Top view dimensions without cover panel



3.1.3 Front view

Front mounting hole size: M3

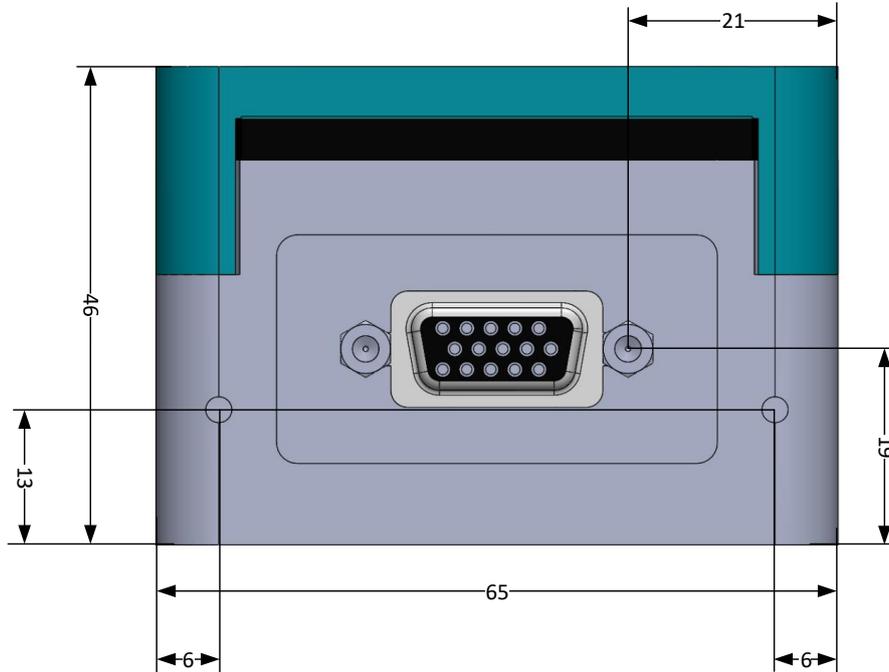


Figure 3-3: Front view without cover panel

3.1.4 Back view

Back view mounting hole size: M3

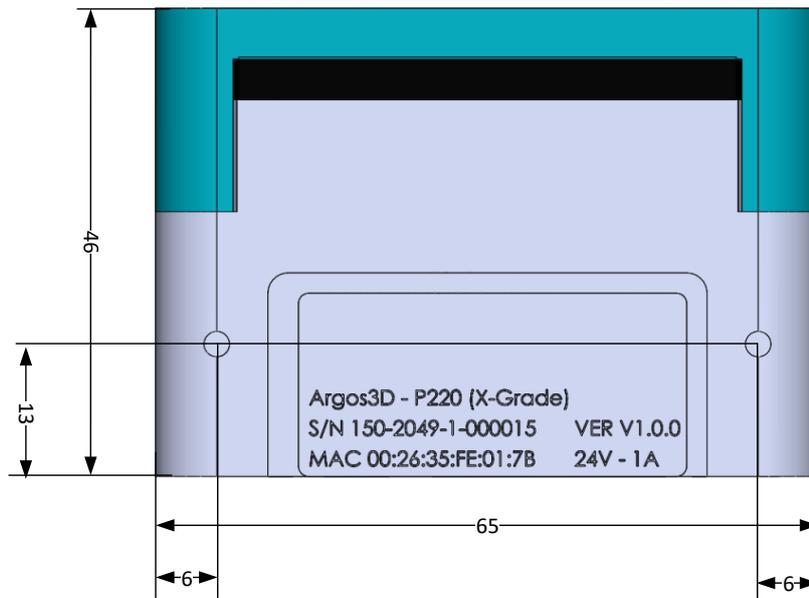


Figure 3-4: Back view without cover panel



3.1.5 Side view

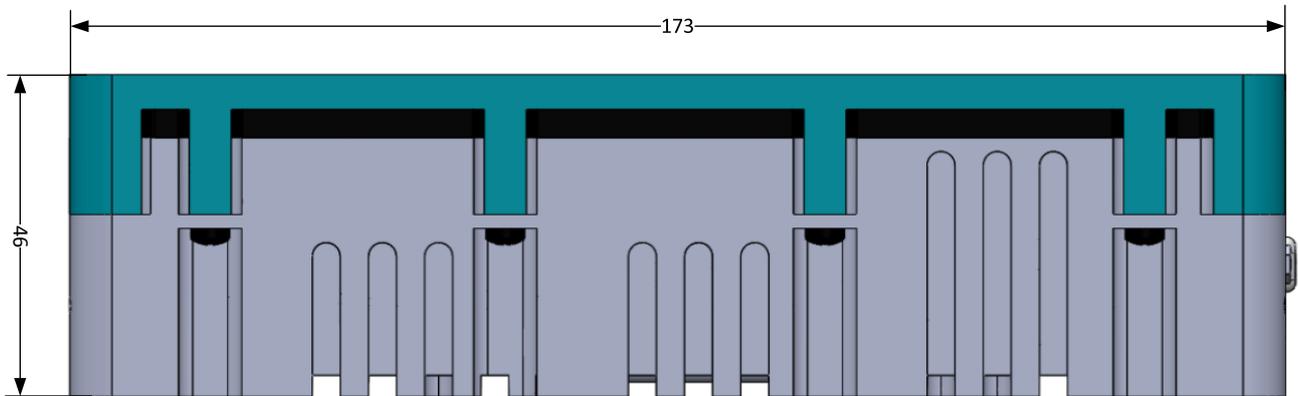


Figure 3-5: Side view without cover panel

3.1.6 Mount Spacing



Caution

Case may become hot!
The user is responsible to take care for an appropriate cooling.

To prevent the Argos3D-P220 from overheating, it is strongly recommended, to keep away nearby objects. This guarantees a constant airflow for proper cooling. This bounding box may be violated, when other cooling techniques are provided.

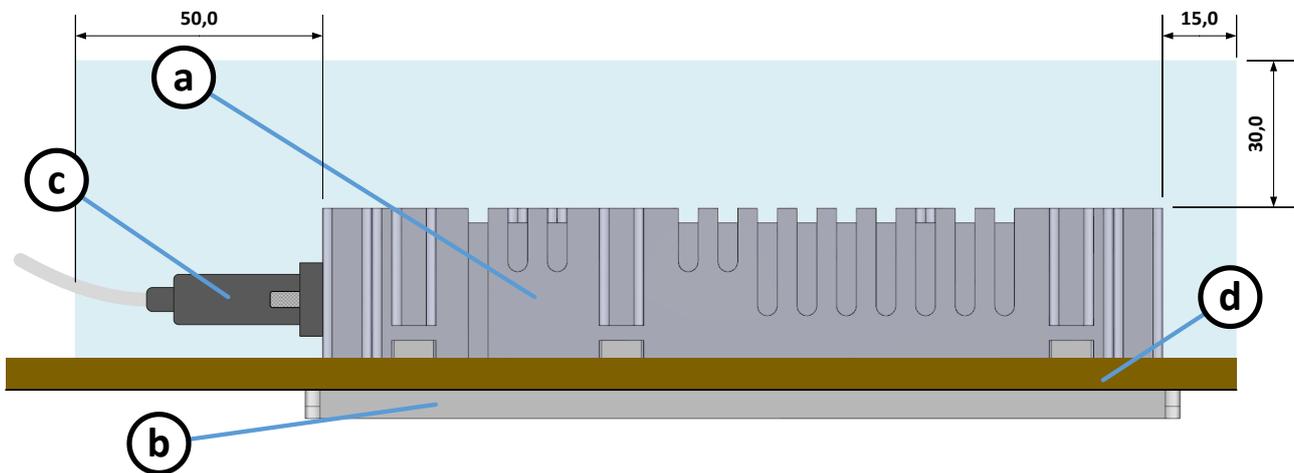


Figure 3-6: Bounding box

- a. Argos3D-P220 Case
- b. Argos3D-P220 Cover plate
- c. Mating IP67 connector
- d. Wall or mounting panel

4 Interface Description

4.1 Signal naming

Signal names are usually written in capital letters. They are noted in positive logic (positive asserted). If the signal is negative asserted an “n” will be added as prefix to the signal name.

Type:

The type describes the electrical characteristics of the signal. The following types are available:

- I Input
- O Output
- DN Negative Differential I/O
- DP Positive Differential I/O
- P Power supply
- 3.3V TTL TTL compatible signal with 3.3V high level and 0V low level.
- 50V tolerant Accepts input voltage levels up to 50V (2.5V high voltage threshold)

4.2 Connector Numbering

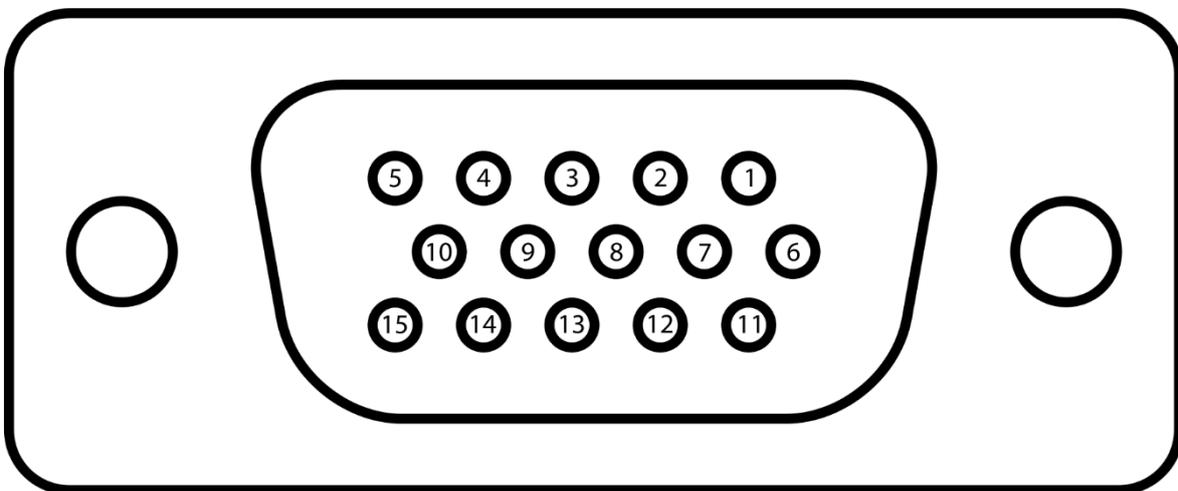


Figure 4-1: Connector Pin Numbering

4.2.1 Connector description

No.	Signal	Type	Description
1	ETH-B_N	DN	Ethernet Lane B
2	ETH-B_P	DP	Ethernet Lane B
3	GND	P	DIO Reference Ground
4	DIO	IO (50V tolerant)	Digital I/O Signal
5	V+	P	Positive Power Supply
6	ETH-C_N	DN	Ethernet Lane C



No.	Signal	Type	Description
7	ETH-C_P	DP	Ethernet Lane C
8	ETH-D_N	DN	Ethernet Lane D
9	ETH-D_P	DP	Ethernet Lane D
10	nTRIGGER	IO (3V3 TTL)	Trigger Input
11	ETH-A_N	DN	Ethernet Lane A
12	ETH-A_P	DP	Ethernet Lane A
13	GND	P	DI Reference Ground
14	DI	I (50V tolerant)	Digital Input Signal
15	V-	P	Power Ground

Table 4-1: Connector Description

4.2.2 Power supply

The power supply pins are protected against wrong polarity.

Voltage range: 16V to 52V.



Note

Use inherently limited power sources only!

4.2.3 DIO

The digital Input-Output interface has an optical isolated input and output stage. Driven by the GPIOs 1 (output) and GPIO 3 (input). See the Software User Manual specifications for GPIO functionality.

The output stage is a solid state relays, and gives the possibility to use the output as a simple switcher. The current is limited to 200mA.

If this interface is used as input, the corresponding output must be set to logically 0. Otherwise the input is constantly shorted. The maximum LOW input detection voltage is 2V, the minimum HIGH input detection voltage is 5V.

4.2.4 Trigger In

The trigger Input is not optically isolated to minimize the propagation delay. But the input is protected against 50V clamp voltages. A standard 3.3V TTL signal should be used.

4.2.5 RS485 Mounting Option

For some Applications a RS485 communication could be needed. Therefore the internal hardware could be modified to route the RS485-A and -B signals to the connector in state of DI (RS485-A) and DIGND (RS485-B).

Ask BECOM BLUETECHNIX for custom modifications.

4.3 Mating Parts

The mating IP67 connector is an A-HDS15-HOOD-WP from ASSMANN WSW components GmbH and available for purchase e.g. at Digi-Key.

4.3.1 Interconnection cable

4.3.2 Development Adapter

For development purposes there is an adapter available with standard Ethernet RJ45 interface and a 2.1mm DC power supply socket.



Figure 4-2: Adapter for Argos3D-P220

4.3.3 Interconnection Adapter

For interconnection there is an adapter available with standard Ethernet RJ45 interface and 2 pole headers for IO and power supply.

Figure 4-3: Interconnection adapter for Argos3D-P220



5 Software

5.1 Firmware

For a description of the firmware related interfaces, protocol descriptions, register settings, etc. please refer to the Software User Manual.

5.2 Demo Application

For the first evaluation of the camera and to evaluate different settings and configurations a .NET demo application for Microsoft Windows is provided: BLT-ToF-Suite. The demo application can be downloaded from our support web site support.bluetechnix.com.

5.3 Getting Started Software Development Example

To facilitate the integration of the Argos module in your own application a getting started example will be available on our download site. Please refer to our support site support.bluetechnix.com.



6 Appendix

6.1 Operating Conditions

Symbol	Parameter	Min	Typical	Max	Unit
V _{IN}	Input supply voltage ³⁾	16	24	52	V
I _{IN}	Average Input current ¹⁾		0,66 ¹⁾	1,5	A
T	Operating Temperature ²⁾	-20		50 ²⁾	°C
T	Storage Temperature	-40		+125	°C
FITP ⁴⁾	Frame-rate Integration Time Product			950	

Table 6-1: Operating Conditions



1) Note

Valid for a frame-rate of 30fps and an integration time of 3500µs. The input current depends on the applied frame-rate and integration time.

2) Note

The maximum operating temperature depends on the frame-rate and integration time.

3) Note

The connector is used as section point.

6.1.1 Input current

The average input current depends on the selected frame-rate (fps) and the integration time (t_{INT}). The following figure shows typical values. The values on the x axis shows the FITP which has been calculated with the following equation:

$$FITP = t_{INT} [ms] \cdot fps \left[\frac{1}{s} \right] \cdot 4$$

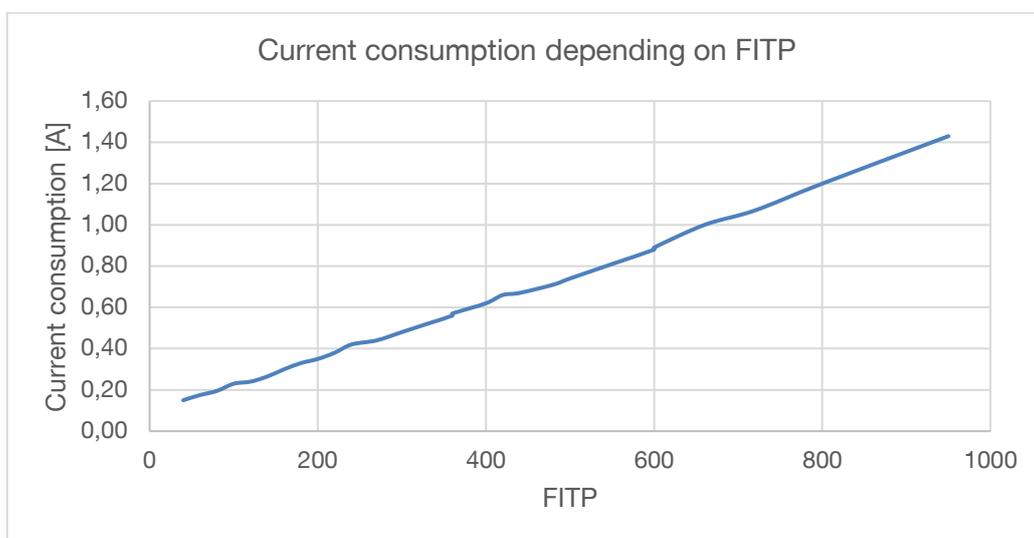


Figure 6-1: Input current @24V depending on frame-rate integration time product

6.1.2 Temperature at the case

The following figure shows the expected case temperature @ 25°C ambient temperature depending on the frame-rate integration time product (FITP). The FITP has been calculated as follow:

$$FITP = t_{INT} [ms] \cdot fps \left[\frac{1}{s} \right] \cdot 4$$

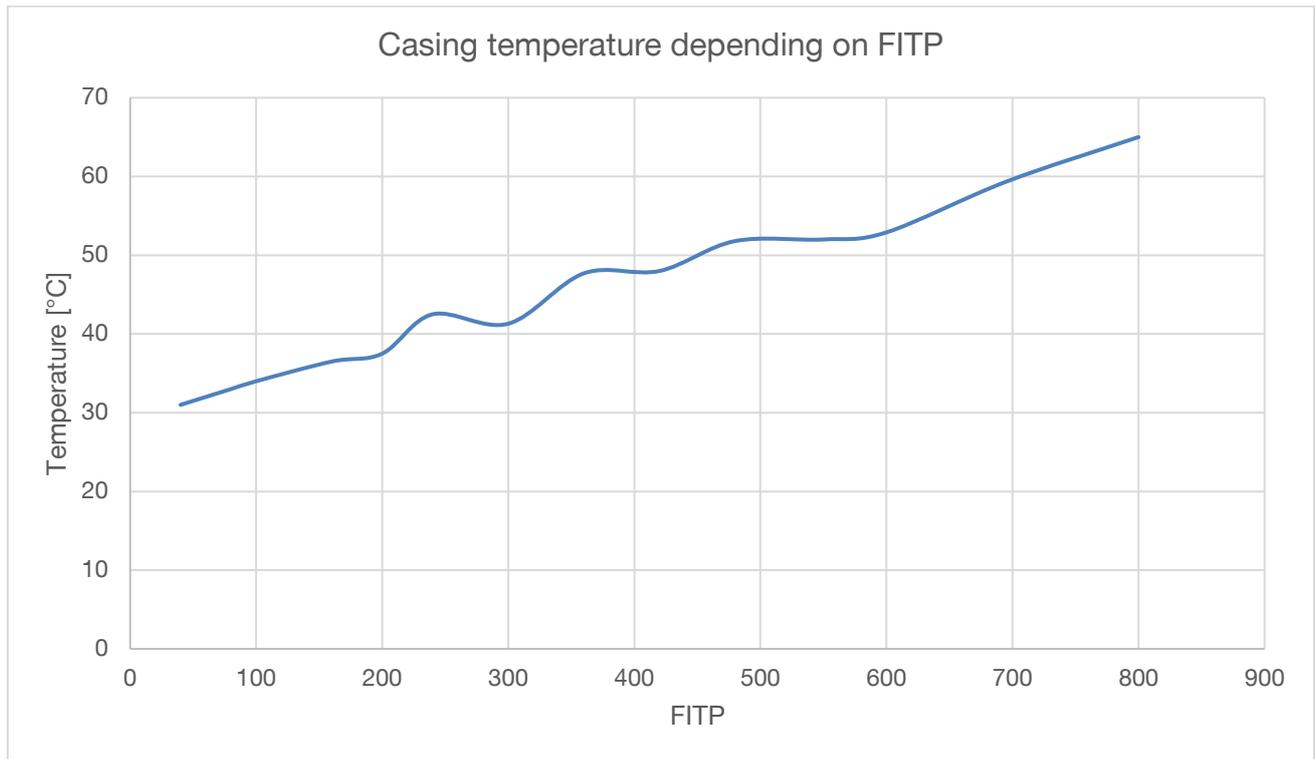


Figure 6-2: Expected cooling plate temperature depending on frame-rate integration time product

The temperature on the casing can be reduced by mounting an additional heat sink on the cooling plate.



Caution

The user is responsible to take care for an appropriate cooling if the Argos camera is mounted into a case.



Caution

Be careful to not stress the device beyond the limits, otherwise you may damage the device.

6.2 Optical Characteristics

Symbol	Parameter	Min	Typical	Max	Unit
#LEDs	Nr. of LEDs		6		
$\Lambda_{CENTROID}$	Centroid-Wavelength of Illumination		850		nm



Symbol	Parameter	Min	Typical	Max	Unit
$\Delta\lambda$	Spectral Bandwidth		30		nm
I_e	Radiant intensity		TBD		W/sr
FoV_H	Horizontal Field of View		90		Deg
FoV_V	Vertical Field of View		67		Deg

6.3 Performance

6.3.1 Environmental Conditions

All the following measurements have been acquired at the following constant environmental conditions.

Parameter	Value
Temperature	23 °C
Humidity	35 %
Ambient light	500 Lux
Modulation Frequency	22,1 MHz
Frame-rate	30 fps

Table 6-2: Environmental Specification

6.3.2 Precision

The following graph shows the standard deviation over 100 samples.

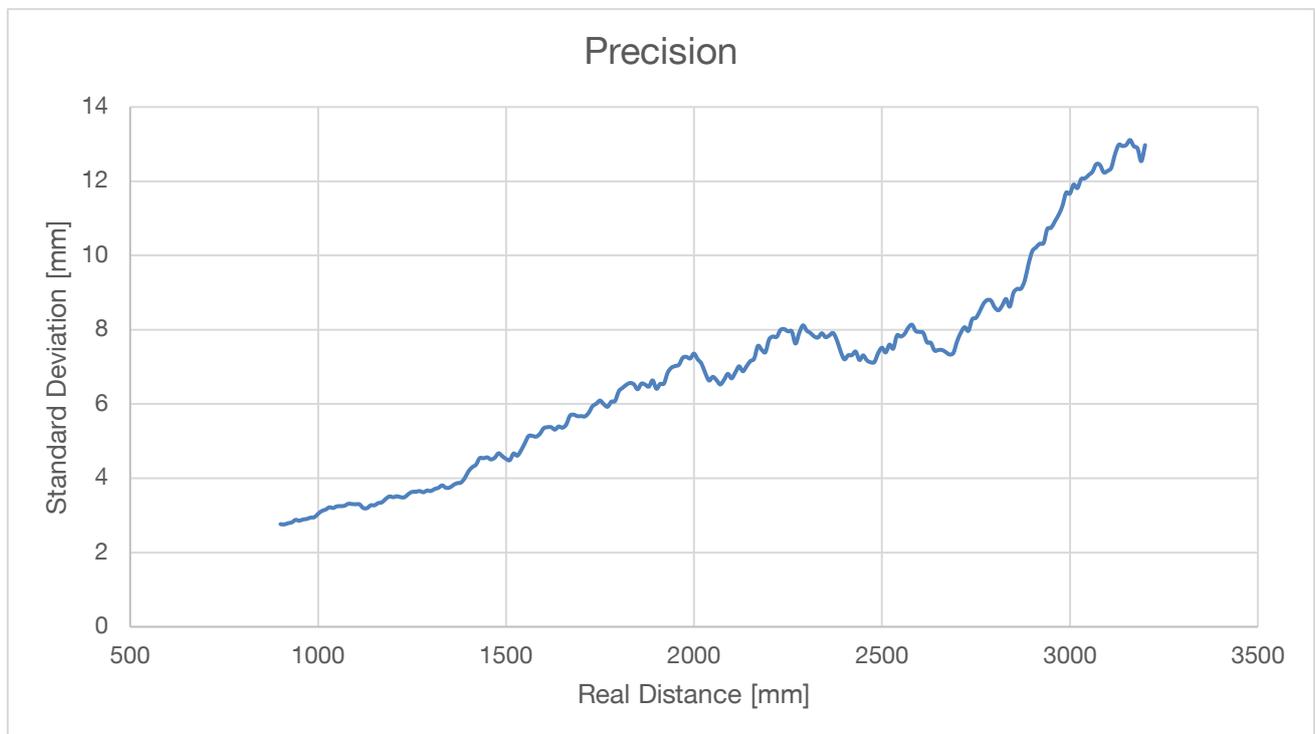


Figure 6-3: Precision



6.3.3 Accuracy

The following figures has been determined by a frame-rate of 30fps and an integration time of 3,5ms with a reflectivity of 90%.

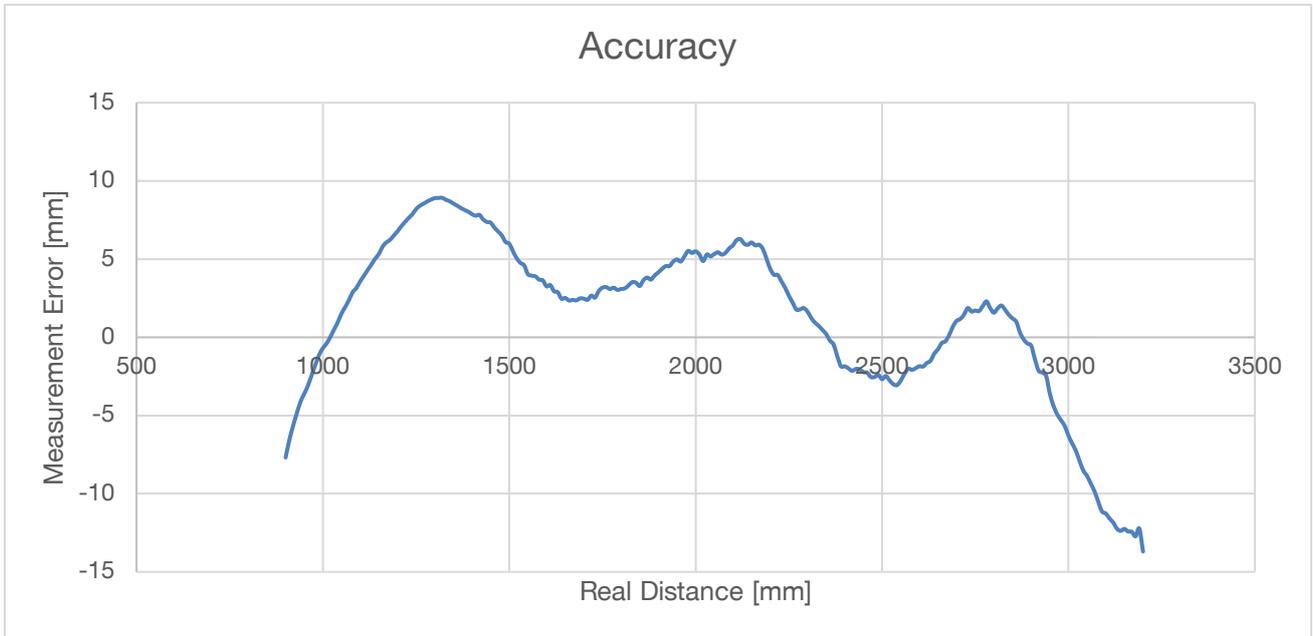


Figure 6-4: Accuracy

6.4 Sensor Location

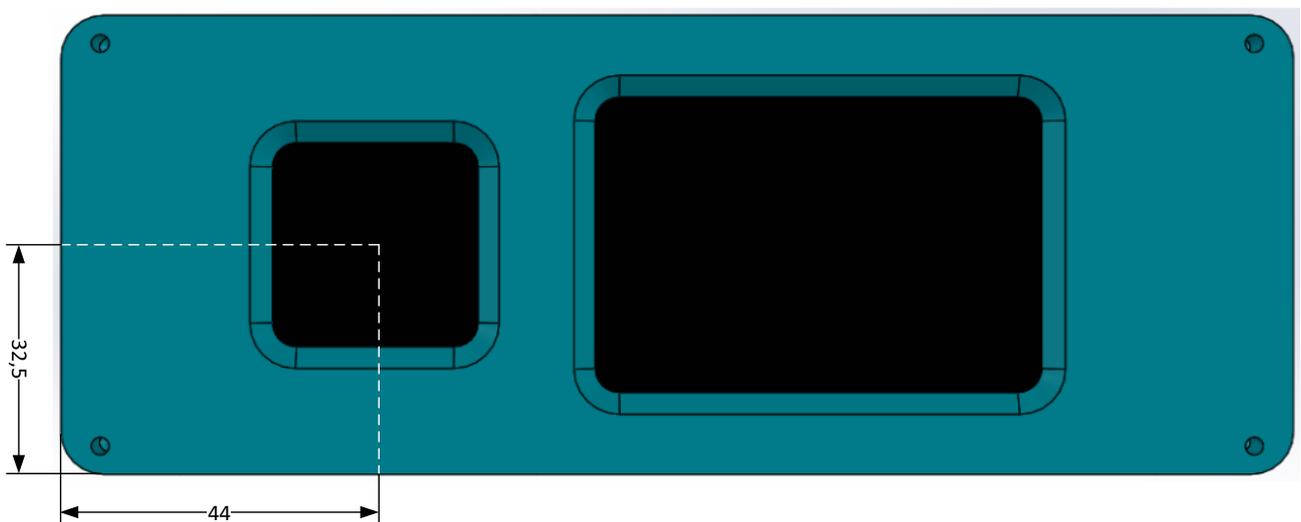


Figure 6-5: Location of optical center of sensor



7 Support

7.1.1 General Support

General support for products can be found at BECOM BLUETECHNIX' support site

Support Link

 <https://support.bluetechnix.at>

7.2 Related Products

- TIM-UP-19KS3-ETH
- LIM-U-LED-850-6



8 Product History

8.1 Version Information

8.1.1 Argos3D-P220

Version	Type	Release date
V1.0.0	X-Grade	December 2016
V1.5.0	X-Grade	January 2018
V1.6.0	Series	July 2018

Table 8-1: Overview Argos3D-P220 product changes

Note



Please refer to our support site for additional information about product changes.

8.2 Anomalies

Applies to	Date	Description
V1.0.0		No anomalies reported yet.
V1.5.0		No anomalies reported yet.

Table 8-2 – Product anomalies

8.3 Document Revision History

Version	Date	Document Revision
1	2016 12 22	First preliminary of the document
2	2018 03 20	- Updates for V1.5.0 - Company name changed - Some typos corrected
3	2018 05 22	Conformity declaration statement added
4	2018 07 16	Accuracy and Precision figures added Operating conditions added
5	2018 08 02	Operating temperature corrected Connector

Table 8-3: Revision history