


BLUETECHNIX Embedding Ideas

Argos 3D - P33X

Quick Start Guide

Version 1



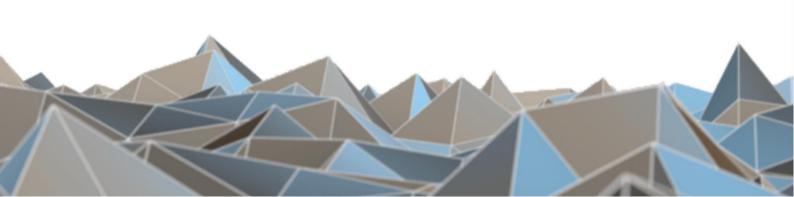



BECOM Bluetechnix GmbH

Gutheil Schoder Gasse 17 1230 Vienna AUSTRIA

office@bluetechnix.com www.bluetechnix.com

Argos3D-P33X - Quick Start Guide

Document No.: 900-308 / A

Publication date: February 20, 2017

Subject to change without notice. Errors excepted.

This document is protected by copyright. All rights reserved. No part of this document may be reproduced or transmitted for any purpose in any form or by any means, electronically or mechanically, without expressly written permission by Bluetechnix GmbH.

Windows is a registered trademark of Microsoft.



Table of Contents

1	Unb	poxing	5
	1.1	In the box	
	1.2	Opening your Argos3D–P33X	
	1.3	Connecting your Argos3D–P33X	
	1.4	Connector Overview	
	1.4.		
		2 Connecting the Ethernet Cable	
2		vnloading the Evaluation Software	
	2.1	Support website	
	2.2	Start-up screen	
	2.3	Prepare your Network Interface Card (NIC)	
3		rt using your Argos3D–P33X with 'BltTofSuite'	
4		tem Requirements & Support	
	4.1	Support	
5	Doc	cument Revision History	



© Bluetechnix 2017

All Rights Reserved.

The information herein is given to describe certain components and shall not be considered as a guarantee of characteristics.

Terms of delivery and rights of technical change reserved.

We hereby disclaim any warranties, including but not limited to warranties of non-infringement, regarding circuits, descriptions and charts stated herein.

Bluetechnix makes and you receive no warranties or conditions, express, implied, statutory or in any communication with you. Bluetechnix specifically disclaims any implied warranty of merchantability or fitness for a particular purpose.

Bluetechnix takes no liability for any damages and errors causing of the usage of this board. The user of this board is responsible by himself for the functionality of his application. He is allowed to use the board only if he has the qualification. More information is found in the General Terms and Conditions (AGB).

Information

For further information on technology, delivery terms and conditions and prices please contact Bluetechnix (http://www.bluetechnix.com).

Warning

Due to technical requirements components may contain dangerous substances.

1 Unboxing

1.1 In the box

- Argos3D–P33X
- CAT5/7 Ethernet Cable
- Quick Start Guide
- Power Supply *

* Note

The power supply's operating temperature is specified from 0 to +40°C. This represents not the effective working temperature of the Argos3D–P33X sensor!

1.2 Opening your Argos3D-P33X

To access the connector compartment unscrew the two screws on the Argos3D-P33X front and take off the connector compartment lid.

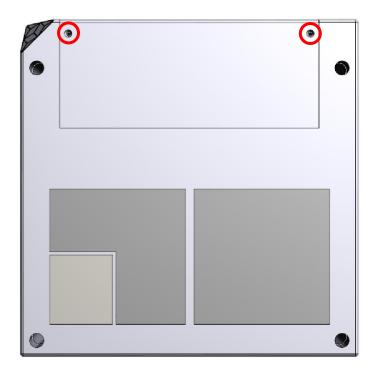


Figure 1-1: Argos3D-P33X connector compartment screw positions

© Bluetechnix 2017 Page 5 | 13

1.3 Connecting your Argos3D-P33X

1.4 Connector Overview

- a. Power Connector
- b. Ethernet
- c. General purpose input 1 & 2
- d. General purpose output 1 & 2
- e. Modulation Light Interface
- f. Trigger

- g. RS232 / RS485
- h. DIP-Switch
- i. Reset-Button
- j. Debug-UART
- k. Status LED

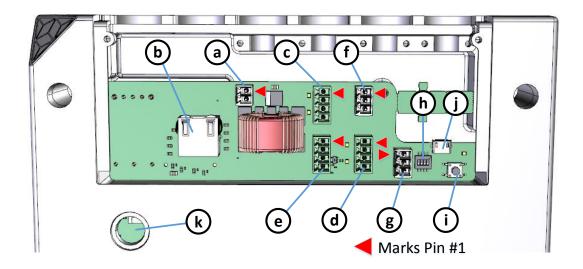


Figure 1-2: Argos3D-P33X connectors and interfaces

Note

Please follow the next steps in the right order to get your 'Argos3D-P33X' up and running correctly.

© Bluetechnix 2017 Page 6 | 13

1.4.1 Connecting the power supply

To ensure, that your Argos3D–P33X works correctly, connect the 'Argos3D' to a **12-30V DC** power supply using connector **(a)** and wait for approximately 20 seconds until the camera boots up.

Pin assignment on the power connector (a): Pin #1: +12V to +30V, Pin#2: GND

Note

The power supply connector is protected against wrong polarity but the 'Argos3D' will not work in case you don't use the correct polarity! If the Argos3D-P33X doesn't work please check the power supply polarity first!

1.4.2 Connecting the Ethernet Cable

Plug in the Ethernet cable (b) and connect your Argos3D-P33X to your PC.

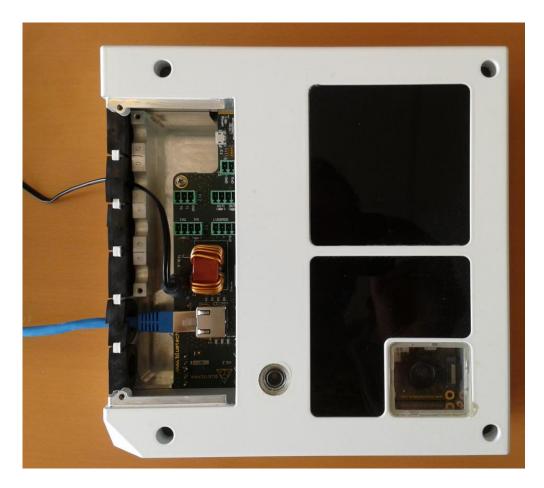


Figure 1-3: Argos3D-P33X with connected power supply and Ethernet cable

© Bluetechnix 2017 Page 7 | 13

2 Downloading the Evaluation Software

Please log in to our support website at https://support.bluetechnix.com/ and download the Argos-P33X customer software package. This package also includes the Bluetechnix ToF-Suite.

2.1 Support website

Select ,free access'



Bluetechnix Support

Welcome to our support area. Please select from one of the items below.

Support & Documentation





Software Download Page



Figure 2-1: Download Evaluation Package

© Bluetechnix 2017 Page 8 | 13

2.2 Start-up screen

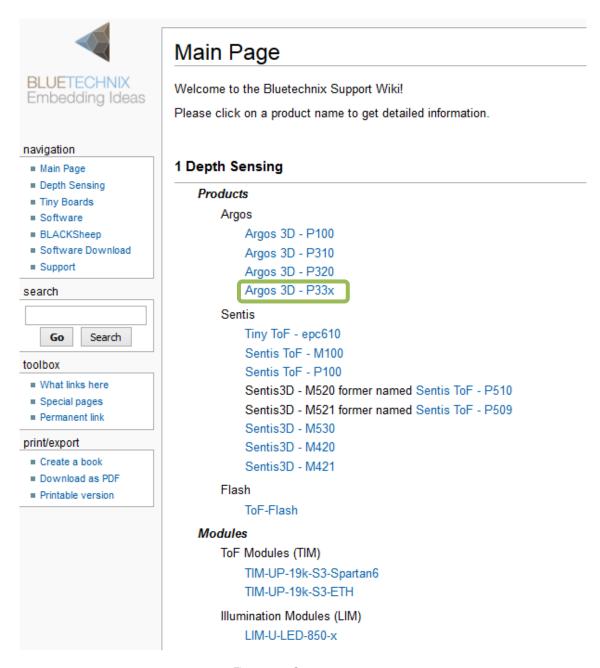


Figure 2-2: Start-up screen

Please select your product: Argos3D - P33X

Please follow the instructions on the WEB-Site

© Bluetechnix 2017 Page 9 | 13

2.3 Prepare your Network Interface Card (NIC)

Once you have connected your Argos3D-P33X to a Network Interface Card (NIC) of your PC give this NIC the IP-Address 192.168.0.1 with a subnet mask of 255.255.255.0.

No driver must be installed on your PC!

The Argos3D-P33X uses IP-Address 192.168.0.10 with subnet mask 255.255.255.0.

© Bluetechnix 2017 Page 10 | 13

3 Start using your Argos3D-P33X with 'BltTofSuite'

Browse to the directory where you previously saved the BltTofSuite software zip file. Unzip the software.

Using this software you can simply display the depth image and the amplitude image of the Argos3D–P33X. For a detailed introduction to the software, please read the 'Bluetechnix ToF Suite - Quick Start Guide'

Place the Argos3D-P33X on your desk approximately 50 cm in front of you.



Figure 3-1: Sample scenario with Argos3D-P33X

Go to the directory where you unzipped the software and start the "BltTofSuite.exe". On how to use the Bluetechnix ToF Suite, please refer to the user manual included in the software support package.

© Bluetechnix 2017 Page 11 | 13

4 System Requirements & Support

An Argos3D-P33X enabled application is required in order to use this 'Argos3D' device.

Connect to a system with:

- Operating System: Microsoft Windows XP/7/Vista
- 32 bit (x68) or 64 bit (x64) processor
- Dual-core 2 GHz or faster CPU
- Dedicated Ethernet port
- 2GByte RAM

4.1 Support

For answers to common questions, troubleshooting steps and further documentation visit our Bluetechnix support website or using the direct link: https://support.bluetechnix.at/wiki/Argos_3D-P33x

© Bluetechnix 2017 Page 12 | 13

5 Document Revision History

Version	Date	Document Revision
1	20161101	First draft

Table 5.1: Revision history

© Bluetechnix 2017 Page 13 | 13