


ToF-Flash V2

Quick Start Guide

Version 1.0

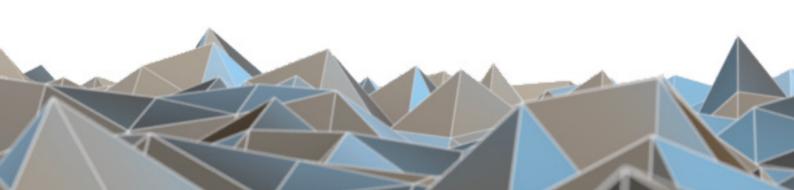





Bluetechnix

Waidhausenstraße 3/19 A-1140 Vienna AUSTRIA

office@bluetechnix.com www.bluetechnix.com

ToF-Flash V2 - Quick Start Guide

Document No.: 900-308 / A

Publication date: August 5, 2014

Subject to change without notice. Errors excepted.

This document is protected by copyright. All rights reserved. No part of this document may be reproduced or transmitted for any purpose in any form or by any means, electronically or mechanically, without expressly written permission by Bluetechnix GmbH.

Windows is a registered trademark of Microsoft.



Table of Contents

1	Unbo	xing	. 5
		n the box	
		Connecting your ToF-Flash V2	
		Connector Overview	
		Connecting the power supply	
		Connecting the Sync Cable	
2	Start	using your ToF-Flash V2	. 7
3	Index		. 8



© Bluetechnix 2014

All Rights Reserved.

The information herein is given to describe certain components and shall not be considered as a guarantee of characteristics.

Terms of delivery and rights of technical change reserved.

We hereby disclaim any warranties, including but not limited to warranties of non-infringement, regarding circuits, descriptions and charts stated herein.

Bluetechnix makes and you receive no warranties or conditions, express, implied, statutory or in any communication with you. Bluetechnix specifically disclaims any implied warranty of merchantability or fitness for a particular purpose.

Bluetechnix takes no liability for any damages and errors causing of the usage of this board. The user of this board is responsible by himself for the functionality of his application. He is allowed to use the board only if he has the qualification. More information is found in the General Terms and Conditions (AGB).

Information

For further information on technology, delivery terms and conditions and prices please contact Bluetechnix (http://www.bluetechnix.com).

Warning

Due to technical requirements components may contain dangerous substances.

1 Unboxing

1.1 In the box

- ToF-Flash V2
- Sync Cable
- Power Supply
- Documentation

1.2 Connecting your ToF-Flash V2

1.2.1 Connector Overview

The ToF-Flash V2 features two connectors. A four pin modulation light connector and a 12 to 30 V_{DC} power connector.

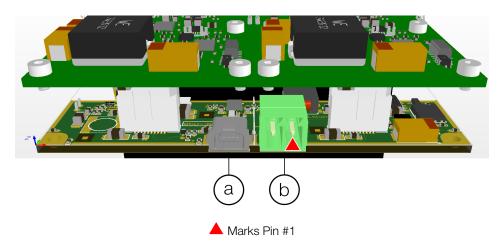


Figure 1-1: Connector Overview

- a. Modulation Light Interface
- b. Power Connector

(Pin #1: +12 to +30 V_{DC}, Pin #2: GND)

Note

Please follow the next steps in the right order to get your 'ToF-Flash V2' up and running correctly.

© Bluetechnix 2014 Page 5 | 8



1.2.2 Connecting the power supply

To verify your ToF-Flash V2, plug in the power supply to connector (b) and check that the fan starts working for approximately 1 second and that the LEDs are blinking.

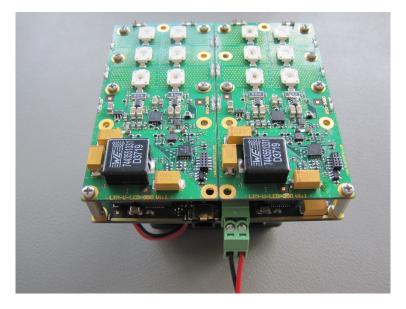


Figure 1-2: Connecting Power Supply

1.2.3 Connecting the Sync Cable

Connect the sync cable to the Modulation Light Interface (a) of your ToF-Flash V2.

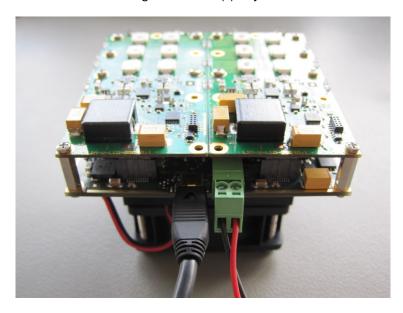


Figure 1-3: Connecting Sync Cable

© Bluetechnix 2014 Page 6 | 8

2 Start using your ToF-Flash V2

After connecting the power supply and the sync cable to your ToF-Flash V2, it is ready to be used as expansion module for e.g. the Sentis-ToF-M100 or Argos^{3D} - P100. For this purpose, connect the other end of the sync cable to the Modulation Light Interface of the camera (see figures).

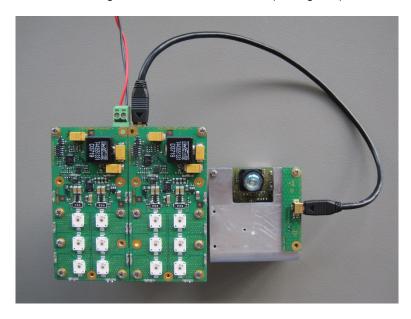


Figure 2-1 ToF-Flash V2 connected to a Sentis-ToF-M100

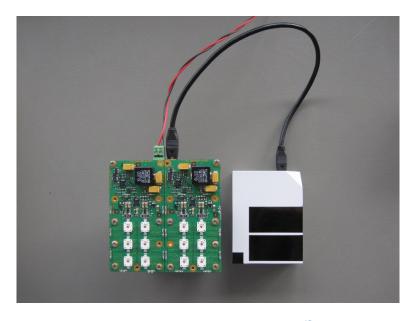


Figure 2-2 ToF-Flash V2 connected to a Argos^{3D} - P100

© Bluetechnix 2014 Page 7 | 8



3 Index

С	
Connecting ToF-Flash V2	5
Contents Package	5
P	
Power Supply Connecting	6

S
Start using your ToF-Flash V2
Sync Cable Connecting

© Bluetechnix 2014 Page 8 | 8